GB WATS 2000

PROGRAMME CHART

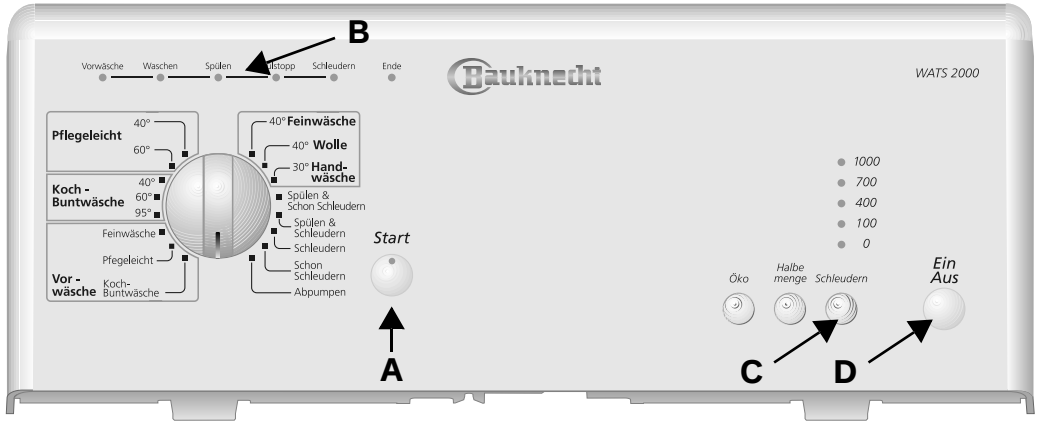

A. "Start" Button
- lights up when activated -

B. Programme sequence indicator

C. "Spin Speed Selection" Button

D. "On/Off" button

1) Do not use liquid detergents.
2) For improved garment care, spin speed is restricted to 700 rpm in this programme.
3) For improved garment care, spin speed is zero in this programme.

Programme		Care Labels	Type of wash / Notes	Max. load kg	Detergents and additives: Prewash	Main Wash	Softener	Bleach	Special Options: Eco *Öko*	Half Load *Halbe menge*	Max. Spin Speed rpm
Cotton 95° with prewash	*Koch-Buntwäsche 95° mit Vorwäsche*	95	Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	Yes 1)	Yes	❊	❊	❊	❊	1000
Synthetic 60° with prewash	*Pflegeleicht 60° mit Vorwäsche*	60	Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	Yes 1)	Yes	❊	—	❊	❊	700 2)
Delicate 40° with prewash	*Feinwäsche 40° mit Vorwäsche*	40	Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	Yes 1)	Yes	❊	—	—	—	700 2)
Cotton 95° - 60° - 40°	*Koch-Buntwäsche 95° - 60° - 40°*	95 60 40	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	Yes	❊	❊	❊	❊	1000
Synthetic 60° - 40°	*Pflegeleicht 60° - 40°*	60 40	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon).	2.0	—	Yes	❊	—	❊	❊	700 2)
Delicate 40°	*Feinwäsche 40°*	40	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	—	Yes	❊	—	—	—	700 2)
Wool 40°	*Wolle 40°*		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. *If you select "Rinse Hold" do not leave items to soak for too long.*	1.0	—	Yes	❊	—	—	—	700 2)
Handwash 30°	*Handwäsche 30°*		Textiles made of silk, linen, wool and viscose marked as "handwashable". *If you select "Rinse Hold" do not leave items to soak for too long. No spinning.*	1.0	—	Yes	❊	—	—	—	— 3)
Rinse & Gentle Spin	*Spülen & Schon Schleudern*	—	*Programme for treating delicate laundry with starch or softener.*	2.0	—	—	❊	—	—	❊	700 2)
Rinse & Spin	*Spülen & Schleudern*	—	*Programme for treating cotton or linen laundry with starch or softener.*	5.0	—	—	❊	—	—	❊	1000
Spin	*Schleudern*	—	*Programme to spin cotton or linen laundry intensively with maximum spin speed.*	5.0	—	—	—	—	—	—	1000
Gentle spin	*Schon Schleudern*	—	*Programme to spin delicate laundry gently with a restricted spin speed.*	2.0	—	—	—	—	—	—	700 2)
Drain	*Abpumpen*	—	*Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".*	—	—	—	—	—	—	—	—

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

Bauknecht is a registered trademark

5019 412 10050

CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
Cotton	95	5.0	66*	1.80	2:05
Cotton	60	5.0	55	0.95	2:05
Cotton	40	5.0	55	0.60	2:05
Synthetic	60	2.0	56	0.80	1:30
Synthetic	40	2.0	56	0.40	1:20
Delicate	40	1.5	60	0.55	0:45
Wool	40	1.0	60	0.50	0:40
Handwash	30	1.0	60	0.30	0:50

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.
The data on the "Energy Label" refer to the programme "Cotton 60°C".
* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

PREPARATION OF WASH CYCLE

1. Load the machine, close the drum doors and check that they are properly locked.
2. Add detergents and additives into the dispenser to no more than the **"MAX"** level mark, as follows:
   - Programme with pre and main wash
   - Main wash programme without prewash
   - Fabric softeners and conditioners
   - Chlorine bleach
   - Stain remover agents
   - Anti-scale agents (if necessary)
3. Press the **"On/Off"** button.
   The lamp of the **"Start"** button flashes.
4. Turn the programme selector knob to the desired programme. The lamp of the programme's standard spin speed lights up.

SELECT THE DESIRED OPTION

Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.

"Eco" button

- The duration of the wash is extended and the max temperature reduced to save up to 40% of energy compared to a normal wash but maintaining good washing results.

"Half Load" button

- Can be used for small loads and lightly soiled laundry.
- Reduces the water consumption especially during the rinses.

Spin speed selection button

- Every programme has an automatically preset spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spin is cancelled and the programme ends with a drain cycle.

PROGRAMME START

Verify that the appliance is switched on.

Turn on the tap and press the **"Start"** button. The indicator lamp of the **"Start"** button stops flashing and lights up.

Note: If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

END OF WASH CYCLE

- The "End" lamp of the programme sequence indicator lights up.

1. Press the **"On/Off"** button to switch off the machine.
2. Turn the tap off.
3. Wait for the lid to unlock (about 1 minute).
4. Open the lid and the drum doors and unload the machine. Leave the lid open for some time to allow the inside of the appliance to dry.

CHANGE THE PROGRAMME DURING THE WASH CYCLE

1. Switch the appliance off by pressing **"On/Off"**.
2. Turn the programme selector knob to the new programme.
3. Switch the appliance on again by pressing **"On/Off"**. The "Start" button flashes. If necessary, select additional options and different spin speed.
4. Start programme by pressing the **"Start"** button.

PAUSE/INTERRUPT A PROGRAMME

If, for any reason, you wish to interrupt the programme for a certain time and continue it later:

1. Press the **"On/Off"** button.
2. After the desired pause, press again on the **"On/Off"** button.

CANCEL PROGRAMME

1. Switch off the appliance by pressing **"On/Off"**.
2. Turn the programme selector to "Drain".
3. Switch the appliance on again by pressing **"On/Off"**. The lamp of the **"Start"** button flashes.
4. Press the "Start" button to start the "Drain" programme.

Bauknecht is a registered trademark